

Flash 400

2 Modes 4 - 8

4 CHs

| Channel | Function | Value | Description |
|---------|-----------|-----------|-------------------|
| 1 | H1 Dimmer | 0 --> 255 | 0% to 100% Dimmer |
| 2 | H2 Dimmer | 0 --> 255 | 0% to 100% Dimmer |
| 3 | H3 Dimmer | 0 --> 255 | 0% to 100% Dimmer |
| 4 | H4 Dimmer | 0 --> 255 | 0% to 100% Dimmer |

7 CHs

| Channel | Function | Value | Description |
|---------|-----------|-------------|-----------------------------------|
| 1 | Dimmer | 0 --> 255 | 0% to 100% Dimmer |
| 2 | H1 Dimmer | 0 --> 255 | 0% to 100% Dimmer |
| 3 | H2 Dimmer | 0 --> 255 | 0% to 100% Dimmer |
| 4 | H3 Dimmer | 0 --> 255 | 0% to 100% Dimmer |
| 5 | H4 Dimmer | 0 --> 255 | 0% to 100% Dimmer |
| 6 | Strobe | 0 | Open |
| | | 1 --> 255 | Slow to Fast Strobe |
| 7 | Macro | 0 --> 50 | Safe |
| | | 51 --> 100 | Color Jump |
| | | 101 --> 150 | Color Gradient |
| | | 151 --> 200 | Color Pulse |
| | | 201 --> 255 | Sound Mode |
| 8 | Speed | 0 --> 255 | Dimmer Speed / Macro Effect Speed |