



Razor RGB6300

4 Modes 9 - 19 - 19 - 32

9 CHs

| Channel | Function | Value | Description |
|---------|-----------------|-------------|------------------------------|
| 1 | Tilt | 0 --> 255 | 240° Bar Tilt |
| 2 | Tilt Speed | 0 --> 255 | Tilt Speed |
| 3 | Pan | 0 --> 255 | 90° Diode Pan |
| 4 | Pan Speed | 0 --> 255 | Pan Speed |
| 5 | Dimmer | 0 --> 127 | Off |
| | | 128 --> 255 | On |
| 6 | Strobe | 0 --> 15 | Close |
| | | 16 --> 30 | Open |
| | | 31 --> 90 | Slow to Fast Variable Strobe |
| | | 91 --> 105 | Open |
| | | 106 --> 165 | Slow to Fast Pulse |
| | | 166 --> 180 | Open |
| | | 181 --> 240 | Slow to Fast Random Strobe |
| | | 241 --> 255 | Open |
| 7 | Laser 1-6 Macro | 0 --> 10 | Off |
| | | 11 --> 45 | R |
| | | 46 --> 80 | G |
| | | 81 --> 115 | B |
| | | 116 --> 150 | RG |
| | | 151 --> 185 | RB |
| | | 186 --> 220 | GB |
| | | 221 --> 255 | RGB |

| | | | |
|---|--------------|-------------|-------------|
| | | 0 --> 8 | Safe |
| | | 9 --> 19 | Effect 1 |
| | | 20 --> 30 | Effect 2 |
| | | 31 --> 41 | Effect 3 |
| | | 42 --> 52 | Effect 4 |
| | | 53 --> 63 | Effect 5 |
| | | 64 --> 74 | Effect 6 |
| | | 75 --> 85 | Effect 7 |
| | | 86 --> 96 | Effect 8 |
| | | 97 --> 107 | Effect 9 |
| | | 108 --> 118 | Effect 10 |
| | | 119 --> 129 | Effect 11 |
| | | 130 --> 140 | Effect 12 |
| | | 141 --> 151 | Effect 13 |
| | | 152 --> 162 | Effect 14 |
| | | 163 --> 173 | Effect 15 |
| | | 174 --> 184 | Effect 16 |
| | | 185 --> 195 | Effect 17 |
| | | 196 --> 206 | Effect 18 |
| | | 207 --> 217 | Effect 19 |
| | | 218 --> 228 | Effect 20 |
| | | 229 --> 239 | Effect 21 |
| | | 240 --> 250 | Auto |
| | | 251 --> 255 | Reset |
| 8 | Macros | 0 --> 250 | Macro Speed |
| 9 | Speed / Mode | 251 --> 255 | Sound Mode |

19 CHs (1)

| Channel | Function | Value | Description |
|---------|------------|--------------------------|---------------|
| 1 | Tilt | 0 --> 255 | 240° Bar Tilt |
| 2 | Tilt Speed | 0 --> 255 | Tilt Speed |
| 3 | Pan 1 | 0 --> 255 | 90° Diode Pan |
| 4 | Pan 2 | 0 --> 255 | 90° Diode Pan |
| 5 | Pan 3 | 0 --> 255 | 90° Diode Pan |
| 6 | Pan 4 | 0 --> 255 | 90° Diode Pan |
| 7 | Pan 5 | 0 --> 255 | 90° Diode Pan |
| 8 | Pan 6 | 0 --> 255 | 90° Diode Pan |
| 9 | Pan Speed | 0 --> 255 | Pan Speed |
| 10 | Dimmer | 0 --> 127 128 --> 255 | Off On |

| | | | |
|--|--|-------------|------------------------------|
| | | 0 --> 15 | Close |
| | | 16 --> 30 | Open |
| | | 31 --> 90 | Slow to Fast Variable Strobe |
| | | 91 --> 105 | Open |
| | | 106 --> 165 | Slow to Fast Pulse |
| | | 166 --> 180 | Open |
| | | 181 --> 240 | Slow to Fast Random Strobe |
| | | 241 --> 255 | Open |
| | | 0 --> 10 | Off |
| | | 11 --> 45 | R |
| | | 46 --> 80 | G |
| | | 81 --> 115 | B |
| | | 116 --> 150 | RG |
| | | 151 --> 185 | RB |
| | | 186 --> 220 | GB |
| | | 221 --> 255 | RGB |
| | | 0 --> 10 | Off |
| | | 11 --> 45 | R |
| | | 46 --> 80 | G |
| | | 81 --> 115 | B |
| | | 116 --> 150 | RG |
| | | 151 --> 185 | RB |
| | | 186 --> 220 | GB |
| | | 221 --> 255 | RGB |
| | | 0 --> 10 | Off |
| | | 11 --> 45 | R |
| | | 46 --> 80 | G |
| | | 81 --> 115 | B |
| | | 116 --> 150 | RG |
| | | 151 --> 185 | RB |
| | | 186 --> 220 | GB |
| | | 221 --> 255 | RGB |
| | | 0 --> 10 | Off |
| | | 11 --> 45 | R |
| | | 46 --> 80 | G |
| | | 81 --> 115 | B |
| | | 116 --> 150 | RG |
| | | 151 --> 185 | RB |
| | | 186 --> 220 | GB |
| | | 221 --> 255 | RGB |

| | | | |
|----|---------------|-------------|-------------|
| | | 0 --> 10 | Off |
| | | 11 --> 45 | R |
| | | 46 --> 80 | G |
| | | 81 --> 115 | B |
| | | 116 --> 150 | RG |
| | | 151 --> 185 | RB |
| | | 186 --> 220 | GB |
| | | 221 --> 255 | RGB |
| 16 | Laser 5 Macro | 0 --> 10 | Off |
| | | 11 --> 45 | R |
| | | 46 --> 80 | G |
| | | 81 --> 115 | B |
| | | 116 --> 150 | RG |
| | | 151 --> 185 | RB |
| | | 186 --> 220 | GB |
| | | 221 --> 255 | RGB |
| 17 | Laser 6 Macro | 0 --> 8 | Safe |
| | | 9 --> 19 | Effect 1 |
| | | 20 --> 30 | Effect 2 |
| | | 31 --> 41 | Effect 3 |
| | | 42 --> 52 | Effect 4 |
| | | 53 --> 63 | Effect 5 |
| | | 64 --> 74 | Effect 6 |
| | | 75 --> 85 | Effect 7 |
| | | 86 --> 96 | Effect 8 |
| | | 97 --> 107 | Effect 9 |
| | | 108 --> 118 | Effect 10 |
| | | 119 --> 129 | Effect 11 |
| | | 130 --> 140 | Effect 12 |
| | | 141 --> 151 | Effect 13 |
| | | 152 --> 162 | Effect 14 |
| | | 163 --> 173 | Effect 15 |
| | | 174 --> 184 | Effect 16 |
| | | 185 --> 195 | Effect 17 |
| | | 196 --> 206 | Effect 18 |
| | | 207 --> 217 | Effect 19 |
| | | 218 --> 228 | Effect 20 |
| | | 229 --> 239 | Effect 21 |
| | | 240 --> 250 | Auto |
| | | 251 --> 255 | Reset |
| 18 | Macros | 0 --> 250 | Macro Speed |
| | | 251 --> 255 | Sound Mode |
| 19 | Speed / Mode | | |

19 CHs (2)

| Channel | Function | Value | Description |
|---------|---------------|-------------|---------------|
| 1 | Laser 1 Macro | 0 --> 255 | 90° Diode Pan |
| | | 0 --> 10 | Off |
| | | 11 --> 45 | R |
| | | 46 --> 80 | G |
| 2 | | 81 --> 115 | B |
| | | 116 --> 150 | RG |
| | | 151 --> 185 | RB |
| | | 186 --> 220 | GB |
| | | 221 --> 255 | RGB |
| 3 | | 0 --> 255 | 90° Diode Pan |
| | Laser 2 Macro | 0 --> 10 | Off |
| | | 11 --> 45 | R |
| | | 46 --> 80 | G |
| 4 | | 81 --> 115 | B |
| | | 116 --> 150 | RG |
| | | 151 --> 185 | RB |
| | | 186 --> 220 | GB |
| | | 221 --> 255 | RGB |
| 5 | | 0 --> 255 | 90° Diode Pan |
| | Laser 3 Macro | 0 --> 10 | Off |
| | | 11 --> 45 | R |
| | | 46 --> 80 | G |
| 6 | | 81 --> 115 | B |
| | | 116 --> 150 | RG |
| | | 151 --> 185 | RB |
| | | 186 --> 220 | GB |
| | | 221 --> 255 | RGB |
| 7 | | 0 --> 255 | 90° Diode Pan |
| | Laser 4 Macro | 0 --> 10 | Off |
| | | 11 --> 45 | R |
| | | 46 --> 80 | G |
| 8 | | 81 --> 115 | B |
| | | 116 --> 150 | RG |
| | | 151 --> 185 | RB |
| | | 186 --> 220 | GB |
| | | 221 --> 255 | RGB |

| | | | |
|----|---------------|-------------|------------------------------|
| 9 | Pan 5 | 0 --> 255 | 90° Diode Pan |
| | | 0 --> 10 | Off |
| | | 11 --> 45 | R |
| | | 46 --> 80 | G |
| | | 81 --> 115 | B |
| 10 | Laser 5 Macro | 116 --> 150 | RG |
| | | 151 --> 185 | RB |
| | | 186 --> 220 | GB |
| | | 221 --> 255 | RGB |
| 11 | Pan 6 | 0 --> 255 | 90° Diode Pan |
| | | 0 --> 10 | Off |
| | | 11 --> 45 | R |
| | | 46 --> 80 | G |
| 12 | Laser 6 Macro | 81 --> 115 | B |
| | | 116 --> 150 | RG |
| | | 151 --> 185 | RB |
| | | 186 --> 220 | GB |
| | | 221 --> 255 | RGB |
| 13 | Dimmer | 0 --> 127 | Off |
| | | 128 --> 255 | On |
| | | 0 --> 15 | Close |
| | | 16 --> 30 | Open |
| | | 31 --> 90 | Slow to Fast Variable Strobe |
| 14 | Strobe | 91 --> 105 | Open |
| | | 106 --> 165 | Slow to Fast Pulse |
| | | 166 --> 180 | Open |
| | | 181 --> 240 | Slow to Fast Random Strobe |
| | | 241 --> 255 | Open |
| 15 | Tilt | 0 --> 255 | 240° Bar Tilt |
| 16 | Tilt Speed | 0 --> 255 | Tilt Speed |
| 17 | Pan Speed | 0 --> 255 | Pan Speed |

| | | | |
|----|--------------|-------------|-------------|
| | | 0 --> 8 | Safe |
| | | 9 --> 19 | Effect 1 |
| | | 20 --> 30 | Effect 2 |
| | | 31 --> 41 | Effect 3 |
| | | 42 --> 52 | Effect 4 |
| | | 53 --> 63 | Effect 5 |
| | | 64 --> 74 | Effect 6 |
| | | 75 --> 85 | Effect 7 |
| | | 86 --> 96 | Effect 8 |
| | | 97 --> 107 | Effect 9 |
| | | 108 --> 118 | Effect 10 |
| | | 119 --> 129 | Effect 11 |
| | | 130 --> 140 | Effect 12 |
| | | 141 --> 151 | Effect 13 |
| | | 152 --> 162 | Effect 14 |
| | | 163 --> 173 | Effect 15 |
| | | 174 --> 184 | Effect 16 |
| | | 185 --> 195 | Effect 17 |
| | | 196 --> 206 | Effect 18 |
| | | 207 --> 217 | Effect 19 |
| | | 218 --> 228 | Effect 20 |
| | | 229 --> 239 | Effect 21 |
| | | 240 --> 250 | Auto |
| | | 251 --> 255 | Reset |
| 18 | Macros | 0 --> 250 | Macro Speed |
| 19 | Speed / Mode | 251 --> 255 | Sound Mode |

32 CHs (1)

| Channel | Function | Value | Description |
|---------|------------|--------------------------|---------------|
| 1 | Tilt | 0 --> 255 | 240° Bar Tilt |
| 2 | Tilt Speed | 0 --> 255 | Tilt Speed |
| 3 | Pan 1 | 0 --> 255 | 90° Diode Pan |
| 4 | Pan 2 | 0 --> 255 | 90° Diode Pan |
| 5 | Pan 3 | 0 --> 255 | 90° Diode Pan |
| 6 | Pan 4 | 0 --> 255 | 90° Diode Pan |
| 7 | Pan 5 | 0 --> 255 | 90° Diode Pan |
| 8 | Pan 6 | 0 --> 255 | 90° Diode Pan |
| 9 | Pan Speed | 0 --> 255 | Pan Speed |
| 10 | Dimmer | 0 --> 127 128 --> 255 | Off On |

| | | | |
|----|---------|-------------|------------------------------|
| | | 0 --> 15 | Close |
| | | 16 --> 30 | Open |
| | | 31 --> 90 | Slow to Fast Variable Strobe |
| | | 91 --> 105 | Open |
| | | 106 --> 165 | Slow to Fast Pulse |
| | | 166 --> 180 | Open |
| | | 181 --> 240 | Slow to Fast Random Strobe |
| | | 241 --> 255 | Open |
| 11 | Strobe | 0 --> 127 | Off |
| 11 | Strobe | 128 --> 255 | On |
| 12 | Red 1 | 0 --> 127 | Off |
| 12 | Red 1 | 128 --> 255 | On |
| 13 | Green 1 | 0 --> 127 | Off |
| 13 | Green 1 | 128 --> 255 | On |
| 14 | Blue 1 | 0 --> 127 | Off |
| 14 | Blue 1 | 128 --> 255 | On |
| 15 | Red 2 | 0 --> 127 | Off |
| 15 | Red 2 | 128 --> 255 | On |
| 16 | Green 2 | 0 --> 127 | Off |
| 16 | Green 2 | 128 --> 255 | On |
| 17 | Blue 2 | 0 --> 127 | Off |
| 17 | Blue 2 | 128 --> 255 | On |
| 18 | Red 3 | 0 --> 127 | Off |
| 18 | Red 3 | 128 --> 255 | On |
| 19 | Green 3 | 0 --> 127 | Off |
| 19 | Green 3 | 128 --> 255 | On |
| 20 | Blue 3 | 0 --> 127 | Off |
| 20 | Blue 3 | 128 --> 255 | On |
| 21 | Red 4 | 0 --> 127 | Off |
| 21 | Red 4 | 128 --> 255 | On |
| 22 | Green 4 | 0 --> 127 | Off |
| 22 | Green 4 | 128 --> 255 | On |
| 23 | Blue 4 | 0 --> 127 | Off |
| 23 | Blue 4 | 128 --> 255 | On |
| 24 | Red 5 | 0 --> 127 | Off |
| 24 | Red 5 | 128 --> 255 | On |
| 25 | Green 5 | 0 --> 127 | Off |
| 25 | Green 5 | 128 --> 255 | On |
| 26 | Blue 5 | 0 --> 127 | Off |
| 26 | Blue 5 | 128 --> 255 | On |
| 27 | Red 6 | 0 --> 127 | Off |
| 27 | Red 6 | 128 --> 255 | On |
| 28 | Green 6 | 0 --> 127 | Off |
| 28 | Green 6 | 128 --> 255 | On |
| 29 | Blue 6 | 0 --> 127 | Off |
| 29 | Blue 6 | 128 --> 255 | On |

| | | | |
|----|-----------------|-------------|-------------|
| | | 0 --> 10 | Off |
| | | 11 --> 45 | R |
| | | 46 --> 80 | G |
| | | 81 --> 115 | B |
| | | 116 --> 150 | RG |
| | | 151 --> 185 | RB |
| | | 186 --> 220 | GB |
| | | 221 --> 255 | RGB |
| | | 0 --> 8 | Safe |
| | | 9 --> 19 | Effect 1 |
| | | 20 --> 30 | Effect 2 |
| | | 31 --> 41 | Effect 3 |
| | | 42 --> 52 | Effect 4 |
| | | 53 --> 63 | Effect 5 |
| | | 64 --> 74 | Effect 6 |
| | | 75 --> 85 | Effect 7 |
| | | 86 --> 96 | Effect 8 |
| | | 97 --> 107 | Effect 9 |
| | | 108 --> 118 | Effect 10 |
| | | 119 --> 129 | Effect 11 |
| | | 130 --> 140 | Effect 12 |
| | | 141 --> 151 | Effect 13 |
| | | 152 --> 162 | Effect 14 |
| | | 163 --> 173 | Effect 15 |
| | | 174 --> 184 | Effect 16 |
| | | 185 --> 195 | Effect 17 |
| | | 196 --> 206 | Effect 18 |
| | | 207 --> 217 | Effect 19 |
| | | 218 --> 228 | Effect 20 |
| | | 229 --> 239 | Effect 21 |
| | | 240 --> 250 | Auto |
| | | 251 --> 255 | Reset |
| 30 | Laser 1-6 Macro | 0 --> 250 | Macro Speed |
| 31 | Macros | 251 --> 255 | Sound Mode |
| 32 | Speed / Mode | | |

32 CHs (2)

| Channel | Function | Value | Description |
|---------|----------|--------------------------|---------------|
| 1 | Pan 1 | 0 --> 255 | 90° Diode Pan |
| 2 | Red 1 | 0 --> 127 128 --> 255 | Off On |
| 3 | Green 1 | 0 --> 127 128 --> 255 | Off On |
| 4 | Blue 1 | 0 --> 127 128 --> 255 | Off On |
| 5 | Pan 2 | 0 --> 255 | 90° Diode Pan |
| 6 | Red 2 | 0 --> 127 128 --> 255 | Off On |
| 7 | Green 2 | 0 --> 127 128 --> 255 | Off On |
| 8 | Blue 2 | 0 --> 127 128 --> 255 | Off On |
| 9 | Pan 3 | 0 --> 255 | 90° Diode Pan |
| 10 | Red 3 | 0 --> 127 128 --> 255 | Off On |
| 11 | Green 3 | 0 --> 127 128 --> 255 | Off On |
| 12 | Blue 3 | 0 --> 127 128 --> 255 | Off On |
| 13 | Pan 4 | 0 --> 255 | 90° Diode Pan |
| 14 | Red 4 | 0 --> 127 128 --> 255 | Off On |
| 15 | Green 4 | 0 --> 127 128 --> 255 | Off On |
| 16 | Blue 4 | 0 --> 127 128 --> 255 | Off On |
| 17 | Pan 5 | 0 --> 255 | 90° Diode Pan |
| 18 | Red 5 | 0 --> 127 128 --> 255 | Off On |
| 19 | Green 5 | 0 --> 127 128 --> 255 | Off On |
| 20 | Blue 5 | 0 --> 127 128 --> 255 | Off On |
| 21 | Pan 6 | 0 --> 255 | 90° Diode Pan |
| 22 | Red 6 | 0 --> 127 128 --> 255 | Off On |
| 23 | Green 6 | 0 --> 127 128 --> 255 | Off On |
| 24 | Blue 6 | 0 --> 127 128 --> 255 | Off On |

| | | | |
|----|-----------------|-------------|------------------------------|
| 25 | Dimmer | 0 --> 127 | Off |
| | | 128 --> 255 | On |
| | | 0 --> 15 | Close |
| | | 16 --> 30 | Open |
| | | 31 --> 90 | Slow to Fast Variable Strobe |
| | | 91 --> 105 | Open |
| | | 106 --> 165 | Slow to Fast Pulse |
| | | 166 --> 180 | Open |
| | | 181 --> 240 | Slow to Fast Random Strobe |
| 26 | Strobe | 241 --> 255 | Open |
| 27 | | 0 --> 255 | 240° Bar Tilt |
| 28 | | 0 --> 255 | Tilt Speed |
| 29 | | 0 --> 255 | Pan Speed |
| | | 0 --> 10 | Off |
| | | 11 --> 45 | R |
| | | 46 --> 80 | G |
| 30 | Laser 1-6 Macro | 81 --> 115 | B |
| | | 116 --> 150 | RG |
| | | 151 --> 185 | RB |
| | | 186 --> 220 | GB |
| | | 221 --> 255 | RGB |
| | | 0 --> 8 | Safe |
| | | 9 --> 19 | Effect 1 |
| | | 20 --> 30 | Effect 2 |
| | | 31 --> 41 | Effect 3 |
| 31 | Macros | 42 --> 52 | Effect 4 |
| | | 53 --> 63 | Effect 5 |
| | | 64 --> 74 | Effect 6 |
| | | 75 --> 85 | Effect 7 |
| | | 86 --> 96 | Effect 8 |
| | | 97 --> 107 | Effect 9 |
| | | 108 --> 118 | Effect 10 |
| | | 119 --> 129 | Effect 11 |
| | | 130 --> 140 | Effect 12 |
| | | 141 --> 151 | Effect 13 |
| | | 152 --> 162 | Effect 14 |
| | | 163 --> 173 | Effect 15 |
| | | 174 --> 184 | Effect 16 |
| | | 185 --> 195 | Effect 17 |
| | | 196 --> 206 | Effect 18 |
| | | 207 --> 217 | Effect 19 |
| | | 218 --> 228 | Effect 20 |
| | | 229 --> 239 | Effect 21 |
| | | 240 --> 250 | Auto |
| | | 251 --> 255 | Reset |
| 32 | Speed / Mode | 0 --> 250 | Macro Speed |
| | | 251 --> 255 | Sound Mode |