

Sparkly 1400P

2 Modes 37 - 41

37 Ch

| Channel | Function | Value | Description |
|-------------|---------------------|-------------|----------------------------|
| 1 | Cyan | 0 --> 255 | 0% to 100% Cyan |
| 2 | Magenta | 0 --> 255 | 0% to 100% Magenta |
| 3 | Yellow | 0 --> 255 | 0% to 100% Yellow |
| 4 | CTO | 0 --> 255 | 0% to 100% CTO |
| 5 | Colour Wheel 1 | 0 --> 7 | Open |
| | | 8 --> 15 | Open + Color 1 |
| | | 16 --> 23 | Color 1 |
| | | 24 --> 31 | Color 1 + Color 2 |
| | | 32 --> 39 | Color 2 |
| | | 40 --> 47 | Color 2 + Color 3 |
| | | 48 --> 55 | Color 3 |
| | | 56 --> 63 | Color 3 + Color 4 |
| | | 64 --> 71 | Color 4 |
| | | 72 --> 79 | Color 4 + Color 5 |
| | | 80 --> 87 | Color 5 |
| | | 88 --> 95 | Color 5 + Color 6 |
| | | 96 --> 103 | Color 6 |
| | | 104 --> 111 | Color 6 + Color 7 |
| | | 112 --> 119 | Color 7 |
| 120 --> 127 | Color 7 + Open | | |
| 128 --> 255 | Slow to Fast Scroll | | |
| 6 | Strobe | 0 --> 3 | Closed |
| | | 4 --> 103 | Slow to Fast Strobe |
| | | 104 --> 107 | Open |
| | | 108 --> 207 | Slow to Fast Random Strobe |
| | | 208 --> 212 | Open |
| | | 213 --> 251 | Slow to Fast Random Strobe |
| | | 252 --> 255 | Open |
| 7 | Dimmer | 0 --> 255 | 0% to 100% Dimmer |
| 8 | Dimmer Fine | 0 --> 255 | 0% to 100% Dimmer Fine |

| | | | |
|-------------|---------------------------|-------------|---------------------------|
| 9 | Apperture | 0 --> 131 | Small to Large Apperture |
| | | 132 --> 171 | Slow to Fast Iris Pulse |
| | | 172 --> 211 | Slow to Fast Open Pulse |
| | | 212 --> 251 | Slow to Fast Close Pulse |
| | | 252 --> 255 | Maximum Aperture |
| 10 | Gobo Wheel 1 | 0 --> 7 | Open |
| | | 8 --> 15 | Gobo 1 |
| | | 16 --> 23 | Gobo 2 |
| | | 24 --> 31 | Gobo 3 |
| | | 32 --> 39 | Gobo 4 |
| | | 40 --> 47 | Gobo 5 |
| | | 48 --> 55 | Gobo 6 |
| | | 56 --> 63 | Gobo 7 |
| | | 64 --> 71 | Gobo 8 |
| | | 72 --> 113 | Fast to Slow CW Rotation |
| | | 114 --> 117 | Stop |
| | | 118 --> 159 | Slow to Fast CCW Rotation |
| | | 160 --> 171 | Slow to Fast Gobo 1 Shake |
| | | 172 --> 183 | Slow to Fast Gobo 2 Shake |
| | | 184 --> 195 | Slow to Fast Gobo 3 Shake |
| | | 196 --> 207 | Slow to Fast Gobo 4 Shake |
| 208 --> 219 | Slow to Fast Gobo 5 Shake | | |
| 220 --> 231 | Slow to Fast Gobo 6 Shake | | |
| 232 --> 243 | Slow to Fast Gobo 7 Shake | | |
| 244 --> 255 | Slow to Fast Gobo 8 Shake | | |
| 11 | Gobo Wheel 2 | 0 --> 18 | Open |
| | | 19 --> 37 | Gobo 1 |
| | | 38 --> 56 | Gobo 2 |
| | | 57 --> 74 | Gobo 3 |
| | | 75 --> 92 | Gobo 4 |
| | | 93 --> 111 | Gobo 5 |
| | | 112 --> 129 | Gobo 6 |
| | | 130 --> 150 | Slow to Fast Gobo 1 Shake |
| | | 151 --> 171 | Slow to Fast Gobo 2 Shake |
| | | 172 --> 192 | Slow to Fast Gobo 3 Shake |
| | | 193 --> 213 | Slow to Fast Gobo 4 Shake |
| | | 214 --> 234 | Slow to Fast Gobo 5 Shake |
| | | 235 --> 255 | Slow to Fast Gobo 6 Shake |
| 12 | Gobo Rotation | 0 --> 127 | Index |
| | | 128 --> 190 | CW Fast to Slow Scroll |
| | | 191 --> 192 | Stop |
| | | 193 --> 255 | CCW Slow to Fast Scroll |
| 13 | Gobo Rot Fine | 0 --> 255 | Gobo Rotation Fine |

| | | | |
|----|-------------------|-------------|-------------------------|
| 14 | Prism | 0 --> 127 | Safe |
| | | 128 --> 255 | Prism |
| 15 | Prism Rotation | 0 --> 127 | Index |
| | | 128 --> 190 | CW Fast to Slow Scroll |
| | | 191 --> 192 | Stop |
| | | 193 --> 255 | CCW Slow to Fast Scroll |
| 16 | Frost | 0 | Open |
| | | 1 --> 255 | Frost |
| 17 | Blade Up 1 | 0 --> 255 | Blade Up 1 |
| 18 | Blade Up 2 | 0 --> 255 | Blade Up 2 |
| 19 | Blade Down 1 | 0 --> 255 | Blade Down 1 |
| 20 | Blade Down 2 | 0 --> 255 | Blade Down 2 |
| 21 | Blade Right 1 | 0 --> 255 | Blade Right 1 |
| 22 | Blade Right 2 | 0 --> 255 | Blade Right 2 |
| 23 | Blade Left 1 | 0 --> 255 | Blade Left 1 |
| 24 | Blade Left 2 | 0 --> 255 | Blade Left 2 |
| 25 | Frames Rotation | 0 --> 255 | Frames Rotation |
| 26 | Focus | 0 --> 255 | 0% to 100% Focus |
| 27 | Focus Fine | 0 --> 255 | 0% to 100% Focus Fine |
| 28 | Zoom | 0 --> 255 | 0% to 100% Zoom |
| 29 | Auto Focus | 0 --> 255 | No Function |
| 30 | Auto Focus Fine | 0 --> 255 | No Function |
| 31 | Pan | 0 --> 255 | 540° Pan |
| 32 | Pan Fine | 0 --> 255 | Pan Fine |
| 33 | Tilt | 0 --> 255 | 270° Tilt |
| 34 | Tilt Fine | 0 --> 255 | Tilt Fine |
| 35 | Function settings | 0 --> 255 | No Function |
| 36 | Control | 0 --> 25 | Safe |
| | | 26 --> 76 | Step Motor Reset |
| | | 77 --> 127 | P/T Reset |
| | | 128 --> 255 | System Reset |
| 37 | Lamp | 0 --> 25 | Safe |
| | | 26 --> 76 | Lamp Off |
| | | 77 --> 127 | Lamp On - 1200W |
| | | 128 --> 255 | Lamp On - 1400W |

| Channel | Function | Value | Description |
|-------------|---------------------|-------------|----------------------------|
| 1 | Cyan | 0 --> 255 | 0% to 100% Cyan |
| 2 | Magenta | 0 --> 255 | 0% to 100% Magenta |
| 3 | Yellow | 0 --> 255 | 0% to 100% Yellow |
| 4 | CTO | 0 --> 255 | 0% to 100% CTO |
| 5 | Colour Wheel 1 | 0 --> 7 | Open |
| | | 8 --> 15 | Open + Color 1 |
| | | 16 --> 23 | Color 1 |
| | | 24 --> 31 | Color 1 + Color 2 |
| | | 32 --> 39 | Color 2 |
| | | 40 --> 47 | Color 2 + Color 3 |
| | | 48 --> 55 | Color 3 |
| | | 56 --> 63 | Color 3 + Color 4 |
| | | 64 --> 71 | Color 4 |
| | | 72 --> 79 | Color 4 + Color 5 |
| | | 80 --> 87 | Color 5 |
| | | 88 --> 95 | Color 5 + Color 6 |
| | | 96 --> 103 | Color 6 |
| | | 104 --> 111 | Color 6 + Color 7 |
| | | 112 --> 119 | Color 7 |
| | | 120 --> 127 | Color 7 + Open |
| 128 --> 255 | Slow to Fast Scroll | | |
| 6 | Strobe | 0 --> 3 | Closed |
| | | 4 --> 103 | Slow to Fast Strobe |
| | | 104 --> 107 | Open |
| | | 108 --> 207 | Slow to Fast Random Strobe |
| | | 208 --> 212 | Open |
| | | 213 --> 251 | Slow to Fast Random Strobe |
| 252 --> 255 | Open | | |
| 7 | Dimmer | 0 --> 255 | 0% to 100% Dimmer |
| 8 | Dimmer Fine | 0 --> 255 | 0% to 100% Dimmer Fine |
| 9 | Apperture | 0 --> 131 | Small to Large Apperture |
| | | 132 --> 171 | Slow to Fast Iris Pulse |
| | | 172 --> 211 | Slow to Fast Open Pulse |
| | | 212 --> 251 | Slow to Fast Close Pulse |
| 252 --> 255 | Maximum Aperture | | |

| | | | |
|-------------|---------------------------|-------------|---------------------------|
| 10 | Gobo Wheel 1 | 0 --> 7 | Open |
| | | 8 --> 15 | Gobo 1 |
| | | 16 --> 23 | Gobo 2 |
| | | 24 --> 31 | Gobo 3 |
| | | 32 --> 39 | Gobo 4 |
| | | 40 --> 47 | Gobo 5 |
| | | 48 --> 55 | Gobo 6 |
| | | 56 --> 63 | Gobo 7 |
| | | 64 --> 71 | Gobo 8 |
| | | 72 --> 113 | Fast to Slow CW Rotation |
| | | 114 --> 117 | Stop |
| | | 118 --> 159 | Slow to Fast CCW Rotation |
| | | 160 --> 171 | Slow to Fast Gobo 1 Shake |
| | | 172 --> 183 | Slow to Fast Gobo 2 Shake |
| | | 184 --> 195 | Slow to Fast Gobo 3 Shake |
| | | 196 --> 207 | Slow to Fast Gobo 4 Shake |
| 208 --> 219 | Slow to Fast Gobo 5 Shake | | |
| 220 --> 231 | Slow to Fast Gobo 6 Shake | | |
| 232 --> 243 | Slow to Fast Gobo 7 Shake | | |
| 244 --> 255 | Slow to Fast Gobo 8 Shake | | |
| 11 | Gobo Wheel 2 | 0 --> 18 | Open |
| | | 19 --> 37 | Gobo 1 |
| | | 38 --> 56 | Gobo 2 |
| | | 57 --> 74 | Gobo 3 |
| | | 75 --> 92 | Gobo 4 |
| | | 93 --> 111 | Gobo 5 |
| | | 112 --> 129 | Gobo 6 |
| | | 130 --> 150 | Slow to Fast Gobo 1 Shake |
| | | 151 --> 171 | Slow to Fast Gobo 2 Shake |
| | | 172 --> 192 | Slow to Fast Gobo 3 Shake |
| | | 193 --> 213 | Slow to Fast Gobo 4 Shake |
| | | 214 --> 234 | Slow to Fast Gobo 5 Shake |
| 235 --> 255 | Slow to Fast Gobo 6 Shake | | |
| 12 | Gobo Rotation | 0 --> 127 | Index |
| | | 128 --> 190 | CW Fast to Slow Scroll |
| | | 191 --> 192 | Stop |
| | | 193 --> 255 | CCW Slow to Fast Scroll |
| 13 | Gobo Rot Fine | 0 --> 255 | Gobo Rotation Fine |
| 14 | Prism | 0 --> 127 | Safe |
| | | 128 --> 255 | Prism |
| 15 | Prism Rotation | 0 --> 127 | Index |
| | | 128 --> 190 | CW Fast to Slow Scroll |
| | | 191 --> 192 | Stop |
| | | 193 --> 255 | CCW Slow to Fast Scroll |
| 16 | Frost | 0 | Open |
| | | 1 --> 255 | Frost |

| | | | |
|----|---------------------|-------------|-----------------------|
| 17 | Blade Up 1 | 0 --> 255 | Blade Up 1 |
| 18 | Blade Up 2 | 0 --> 255 | Blade Up 2 |
| 19 | Blade Down 1 | 0 --> 255 | Blade Down 1 |
| 20 | Blade Down 2 | 0 --> 255 | Blade Down 2 |
| 21 | Blade Right 1 | 0 --> 255 | Blade Right 1 |
| 22 | Blade Right 2 | 0 --> 255 | Blade Right 2 |
| 23 | Blade Left 1 | 0 --> 255 | Blade Left 1 |
| 24 | Blade Left 2 | 0 --> 255 | Blade Left 2 |
| 25 | Frames Rotation | 0 --> 255 | Frames Rotation |
| 26 | Focus | 0 --> 255 | 0% to 100% Focus |
| 27 | Focus Fine | 0 --> 255 | 0% to 100% Focus Fine |
| 28 | Zoom | 0 --> 255 | 0% to 100% Zoom |
| 29 | Auto Focus | 0 --> 255 | No Function |
| 30 | Auto Focus Fine | 0 --> 255 | No Function |
| 31 | Pan | 0 --> 255 | 540° Pan |
| 32 | Pan Fine | 0 --> 255 | Pan Fine |
| 33 | Tilt | 0 --> 255 | 270° Tilt |
| 34 | Tilt Fine | 0 --> 255 | Tilt Fine |
| 35 | Function settings | 0 --> 255 | No Function |
| 36 | Control | 0 --> 25 | Safe |
| | | 26 --> 76 | Step Motor Reset |
| | | 77 --> 127 | P/T Reset |
| | | 128 --> 255 | System Reset |
| 37 | Lamp | 0 --> 25 | Safe |
| | | 26 --> 76 | Lamp Off |
| | | 77 --> 127 | Lamp On - 1200W |
| | | 128 --> 255 | Lamp On - 1400W |
| 38 | Pan/Tilt Speed | 0 --> 255 | Pan/Tilt Speed |
| 39 | Color Wheel Speed | 0 --> 255 | Color Wheel Speed |
| 40 | Light Wheel Speed | 0 --> 255 | Light Wheel Speed |
| 41 | Pattern Wheel Speed | 0 --> 255 | Pattern Wheel Speed |